

KOPFJÄGER

AMBUSH ASSEMBLY



MOUNTS ON WINDOW LEDGE



LOCKED IN PLACE WHEN SET



FIREARM SITS ABOVE THE LEDGE



PICK UP AND MOVE EASILY



ADJUST BIPOD TO FIT LEDGE



HEAVY DUTY CONSTRUCTION



USER MANUAL

KJ85005

AMBUSH ASSEMBLY

The Ambush is a fully patented (U.S. Patent 9.200,858 B2) shooting device designed from the ground up with hunters in mind. Shoot with confidence from the Ambush.

A bipod is required for the Ambush assembly to be functional. If purchased with a bipod, simply attach the bipod to the picatinny rail section located on the frame of the Ambush. The rubber textured grip portion of the Ambush is designed to slip over the window sill of most deer blinds.

The Ambush is designed to fold into a compact package for easy stowage.

DIAGRAM

 
 
 
 
1. Ambush Assembly Arm
2. 90 Degree Grip and Sleeve
3. Picatinny Rail
4. Threaded Base Screw
5. Adjustment Threaded Hole



SPECIFICATION:

GENERAL DESCRIPTION	
Brand Name	Kopfjäger
Model Name	Ambush Support Assembly
Category Name	Shooting Rest
SKU Number	KJ85005
UPC Number	812495026096
TECHNICAL SPECIFICATIONS	
Dimension, in/mm	12.24 x 4.17 x 3.4 / 311 x 106 x 86
Material	Aluminum
Weight, Lbs/g	1.22 / 554
INCLUDED ACCESSORIES	
	Camera thread adapter
	Socket head screw
FEATURES	
	KJ86000 Kopfjäger Reaper Grip System
	KJ86002 KopfjägerReaper Rail System - Picatinny
	KJ86003 Kopfjäger Reaper Rail System - Arca Swiss
	KJ89004 Kopfjäger Replacement Grip Sleeves

Please visit www.kjrests.com for warranty details and information

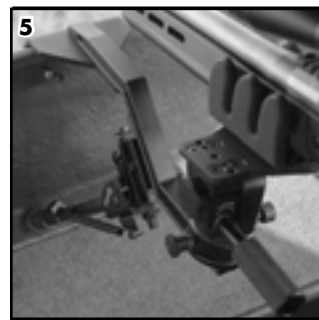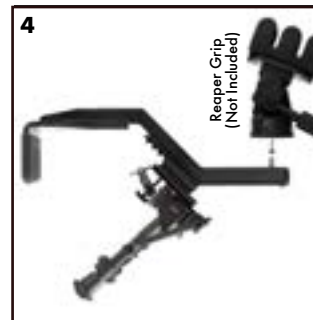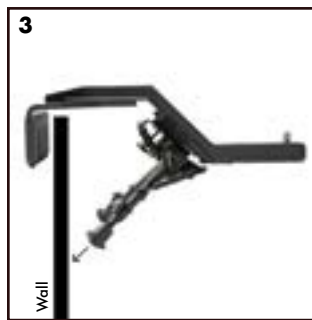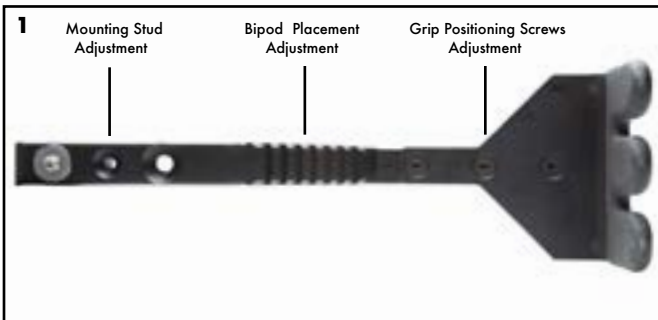

AMBUSH ADJUSTMENTS

This grip portion is adjustable by removing the three screws located on the underside of the grip. This will allow the shooter to reposition the grip portion of the desired setting and reattach the screws. This feature enables the frame of the Ambush to extend deeper into the deer blind. (figure 1)

Another adjustment feature that enables fitting the Ambush into different blind designs is the picatinny rail section. It is important to attach the bipod on the correct section of rail that supports the Ambush and the rifle parallel to the floor of the blind. Positioning the bipod correctly is essential, because it supports the weight of the rifle. Improper fitting of the bipod to the Ambush and the wall of the blind could cause the Ambush and rifle to become unstable. Extending or reducing the length of the bipod legs ensures a secure attachment of the Ambush to the blind at the proper angle.

The final adjustment feature built into the Ambush are the three drilled and threaded holes on the lower

portion of the Ambush frame. Used in conjunction with one of our Kopfjäger Industries rifle rests, the shooter is allowed to choose the mounting location that best fits the shooter, the blind and the firearm being used. The Ambush comes with a 3/8-16 stainless steel mounting bolt as well as a 1/4-20 bolt and can also be used with other full-sized ball head options.

ATTACHING AND DETACHING THE AMBUSH

Worth emphasizing, Ambush installation and stability is facilitated by gravity. Any upward or lifting motion done to the rear, hand grip or buttstock of a rifle can cause the Ambush to become detached from the blind window. Any and all movement made by the shooter to track a target or fire the rifle should be done using proper shooting techniques while staying welded into the rifle stock. The Ambush is designed to quickly and quietly move from one window to another by lifting upwards on the rifle and Ambush frame at the same time to detach, and then reseat the Ambush and firearm configuration in the desired window.

KOPFJAGER REPLACEMENT GRIP SLEEVE FOR THE AMBUSH

If your Ambush grip begins to wear down, then simply visit kofjagerindustries.com to purchase replacement grip sleeve (KJ89004.) Simply slide off the old rubber grip sleeve and replace with the new sleeve.



WARNING

Before handling the Ambush, read and understand the contents of your manual. Follow all standard safety precautions and procedures during use.

- Never leave a loaded firearm on the Ambush without having positive physical control over the shooting system.
- Do not exceed the bipod and Ambush maximum load capacity.
- Ensure the bipod, grip and rifle are secure before using.
- Always remove rifle and other accessories during transport.
- Do not over tighten. Over tightening could damage the threads on the Ambush.

MAINTENANCE

- Clean with a mild detergent and soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.

NOTES:
